

## IMPORTANT INFORMATION

**IMPORTANT!** Read this information before proceeding. It is the user's responsibility to take the following precautions at all times.

- Always stake or weigh down your shelter. Do not use in any potentially windy or rainy weather.  
  
Wind and rain can damage the E-Z UP® Instant Shelter® product and may also result in injury to you or others. Therefore, do not rely on shelter for protection in heavy or prolonged rain storms.
- The E-Z UP® Instant Shelter® product is designed as a temporary shelter. Do not leave up for extended periods.
- Use caution when handling the E-Z UP® folding frame. Avoid pinching hands or fingers as frame opens or closes.
- Do not use shelter in a lightning storm.
- Do not leave your E-Z UP® Instant Shelter® product unattended.
- Do not build fires within shelter enclosure.

**WARNING:** Keep all flame and heat sources away from all shelter fabrics. These fabrics meet the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric may render the flame-resistant properties ineffective.

## CARE AND MAINTENANCE

For long lasting durability and the best possible protection for your E-Z UP® Instant Shelter® products, follow these E-Z care and maintenance instructions:

- Use a mild soap (not detergent) and plenty of water for top cleaning.
- Let the E-Z UP® top and frame dry completely before closing or storing to avoid mildew.
- Frame will operate and look better if occasionally wiped with silicone spray, especially before and after use in damp conditions. Remove excess silicone residue before applying top.
- Use a seam sealer if top leaks or drips water. Available at most sporting goods and hardware stores.
- Slightly tighten bolts if frame becomes loose.

**ezup.com**



## PRODUCT WARRANTY

INTERNATIONAL E-Z UP, INC., manufacturer of E-Z UP® Instant Shelter® products, warrants to the original purchaser who provides a dated sales receipt, from an Authorized Dealer, each part of the E-Z UP® Instant Shelter® product to be free from defects in material or workmanship for a period of **THREE YEARS** after the date of original purchase. This warranty applies only for normal and expected uses, as determined by the manufacturer. INTERNATIONAL E-Z UP, INC.'s obligation and liability under this warranty is limited to the repair or replacement (at its option) of the product or its parts, after its own review and examination.

**RETURN ADVISORY** - Before returning any part or product to INTERNATIONAL E-Z UP, INC. or its designated representative, please phone or write to obtain specific return shipping instructions. All shipping costs must be prepaid, and INTERNATIONAL E-Z UP, INC. is not responsible for products damaged in transit.

**CONDITIONS** - This warranty shall be void as to any product which has been altered or modified in any manner. This warranty does not apply to damages caused by wind, rain, or other forces of nature, not to accidental or deliberate damage of the product, nor to use of the product that does not conform with the product instructions.

This warranty is provided in lieu of all other warranties, expressed or implied.

**ezup.com**

**We Make Life E-Z!**  
**INTERNATIONAL E-Z UP, INC.**

1900 Second Street, Norco, California 92860  
(951) 279-0999 • Fax (951) 279-0888

**ezup.com**

Customer Service Hot Line  
**800-SHADE ME**  
8 0 0 - 7 4 2 - 3 3 6 3

OWNER'S MANUAL

## E-Z UP® INSTANT SHELTER®



**"Sets Up in Seconds!"**

**Pyramid II**

**10' x 10'**  
**(3.0 m x 3.0 m)**

With proper care, this shelter will deliver years of trouble free service. Please take a few minutes to read the following use and care instructions. If you have any questions or require assistance, please call.



**Customer Service Hot Line**  
**800-SHADE ME**  
8 0 0 - 7 4 2 - 3 3 6 3

**ezup.com**

# WHAT'S IN THE BOX

Please read each step before you attempt to set up. Save these instructions for future reference.

- 1 10' x 10' (3.0 m x 3.0 m) Pyramid™ II Frame
- 1 Recreational Grade Top\*
- 4 Piece Standard Stake Set
- 1 Roller Bag\*

\* Available in the Shelter Package only

# FIRST TIME TOP ATTACHMENT

## \*Note: First Time Attachment Is Required.

Top and frame are shipped unattached to avoid damage. A first time setup requires that top be attached to the frame. Once top is attached, set up and take down are easily accomplished within seconds.



**1.** Place your E-Z UP® frame in the center of area to be shaded. With partner on opposite side, grasp two outer legs, slightly lift off ground and step backwards, stopping at full arms' length.



**2.** Gently unfold the fabric top and place it over the open frame.



**3.** Attach the top to the frame by matching the quick attachment strips on the top with the strips on the frame. Push firmly together at each corner.

# HOW TO SET UP

Repeat Step 1 in First Time Top Attachment.



**1.** With partner on opposite side of shelter, stand diagonally facing one another. Grasp the top and bottom of the diamond shaped area of trusses on opposite sides. Lift up and step backward until shelter is 3/4 opened, being careful not to pinch fingers.



**2.** To engage the Auto Slider® at each corner, first lift the fabric off of the slider, then with one hand hold the top of the leg while pushing up on the slider with the other hand. The pull pin will engage the hole. Pull down the fabric valance over the slider. Repeat on all four corners.




**3.** Lift two adjacent outer legs and slide out inner legs until the pull pin engages the inner leg. Repeat on the opposite legs. **Use stakes or weight bags to secure in windy conditions.**

# HOW TO TAKE DOWN




**1.** With partner, slightly lift up two adjacent outer legs, release the pull pin lock and telescope inner legs into outer legs. Repeat on the opposite legs.

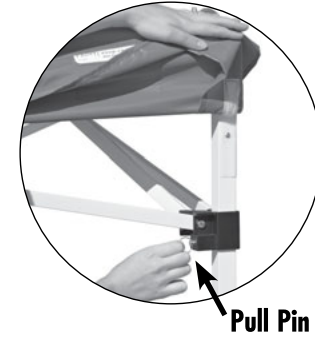

**2.** Release pull pin slider at each corner by first lifting valance fabric away from slider. With one hand, push up on truss near slider to remove the weight of the shelter from the pull pin. Release slider by disengaging pull pin and pushing slider down.

**Note:** It is much easier to release pull pin when the shelter weight has been removed from the pull pin.

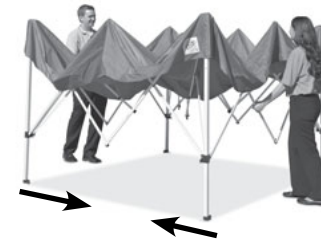

**3.** With partner on opposite sides grasp the top and bottom diamond shaped area over trusses by "close" sticker. Lift the shelter up slightly and shake it while stepping towards your partner until the shelter is 3/4 closed. Grasp adjacent outer legs and push shelter together until it fully closes. **Be careful not to pinch fingers.**

**4.** Store shelter in roller bag.